



Frequently Asked Questions

How do I disable dehumidification in the controller?

1. To disable dehumidification in the controller, first you must login with the service level. Follow this menu path: Main Menu > Ctrl Variables > Advanced > Login. The service level password is 9998.

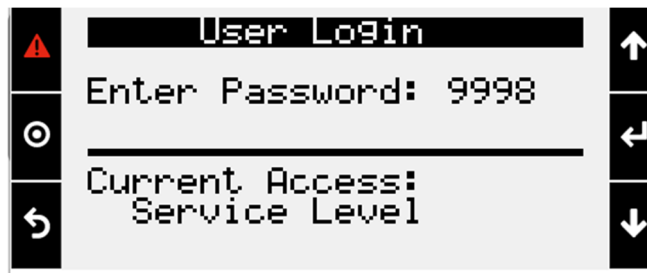

2. Once logged in, Enter into Unit Config which is inside the Advanced Menu.

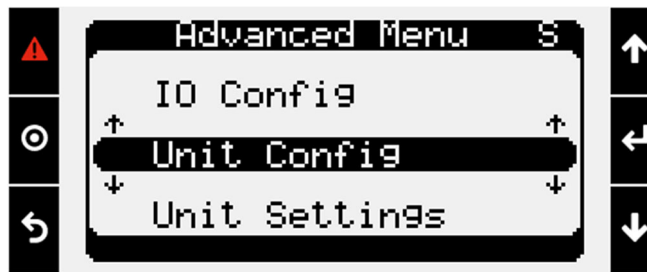

3. Press Enter on Service Config.



- As you scroll down, you will come to the Dehumidification Mode menu. Press the Enter button to move the cursor down to the check box. Use the Up/Down Arrows to remove the X from the check box. Press the Enter button to finish editing. Dehumidification mode has now been disabled.

