


Frequently Asked Questions

How do I add or remove the Modbus space thermostat in the controller?

Note: This FAQ document is for dealing with Modbus thermostats, to add non-Modbus space sensors, see the FAQ document titled “How do I add or remove inputs and outputs in the controller?”.

Note: If more than one Modbus space thermostat is to be installed, they must be installed in a daisy chain and the Modbus addresses must be set appropriately via dipswitches on the sensors. See the controls IOM or FAQ document titled, “How do I install my BAPI Modbus space thermostats?” for additional details on this.

1. Press the Main Menu button on the c.pCO controller (Bullseye Symbol, Middle Left Button).
2. Scroll down to Ctrl Variables. Press Enter.
3. Scroll down to Temp Control. Press Enter.
4. Scroll down until you see the page below.

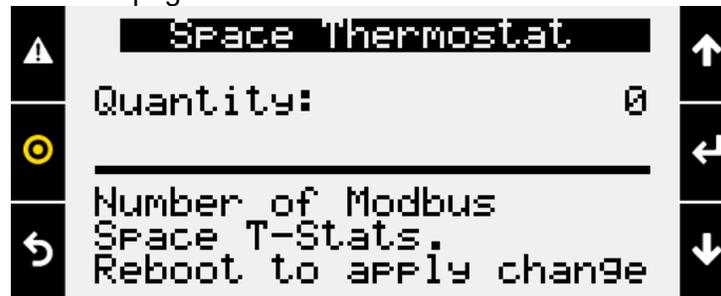

5. Press Enter to move the cursor down to “Quantity:”.
6. Use the Up/Down arrow keys to change the value to the correct number of thermostats installed.
 - a. If you are removing the sensor from the unit, set this to 0.
 - b. If you are adding sensors, you will need to change this from 0 to however many thermostats you are installing.
7. Once the quantity properly reflects how many thermostats are installed, press Enter.
8. The controller will prompt you to reboot the controller. To do this, power cycle the unit.