


Frequently Asked Questions

When will the unit enter dehumidification mode?

To determine when the unit will enter dehumidification mode, follow the steps below.

1. Press the “bullseye” button to go to the Main Menu.

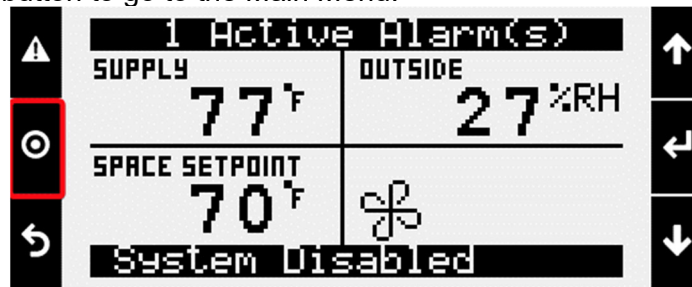


2. Press the Enter button on “Ctrl Variables” to access the Ctrl Variables Menu.



3. Press the Enter button on “Dehumidification” to access the Dehumidification Menu.



4. Use the Up/Down arrow keys to navigate to the Dehumidification Mode Screen. This screen will indicate when the unit will enter a dehumidification mode when the unit is in an occupied mode. The specific setpoint/s (Example: 55%RH) at which the unit will enter dehumidification mode can also be edited on this page.

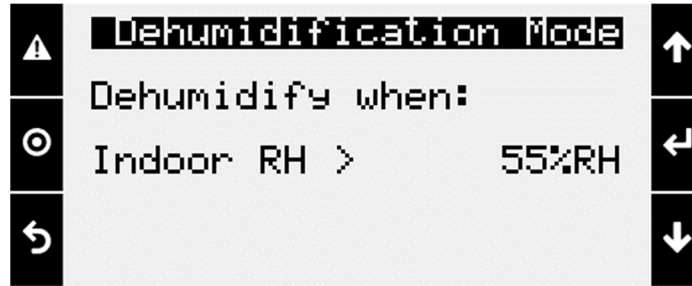

5. Use the Down arrow key to navigate to the Dehumidification Mode Unoccupied Mode screen. This screen will indicate when the unit will enter a dehumidification mode when the unit is in an unoccupied mode. The specific setpoint/s (Example: 60%RH & 55°F) at which the unit will enter dehumidification mode can also be edited on this page.

