

Frequently Asked Questions

How warm should it be outside for refrigeration cooling startup?

While the refrigeration circuit is allowed to run anytime the ambient conditions are above the cooling ambient lockout (default 55°F), it is recommended that cooling startup take place when conditions allow for optimal load testing to better compare the measured refrigeration values with ideal refrigeration values. For many sites/applications, this it is difficult to do if the ambient temperature is below 65°F.