


Frequently Asked Questions

How do I install the condensate P-trap that came with my unit?

1. Fasten the threaded adapter (1) to the unit's drainpipe stub-out.
2. Assemble the trap as shown in the image below, using PVC compatible adhesive where applicable. Do not use glue on the plug (7).
3. Check for proper operation by priming the trap and installing the PVC plug (7).
 - a. Note: Failure to install and prime the condensate P-trap properly can lead to condensate water building up in the unit. Over time, this can lead to water flooding out to other sections of the unit and even the space.

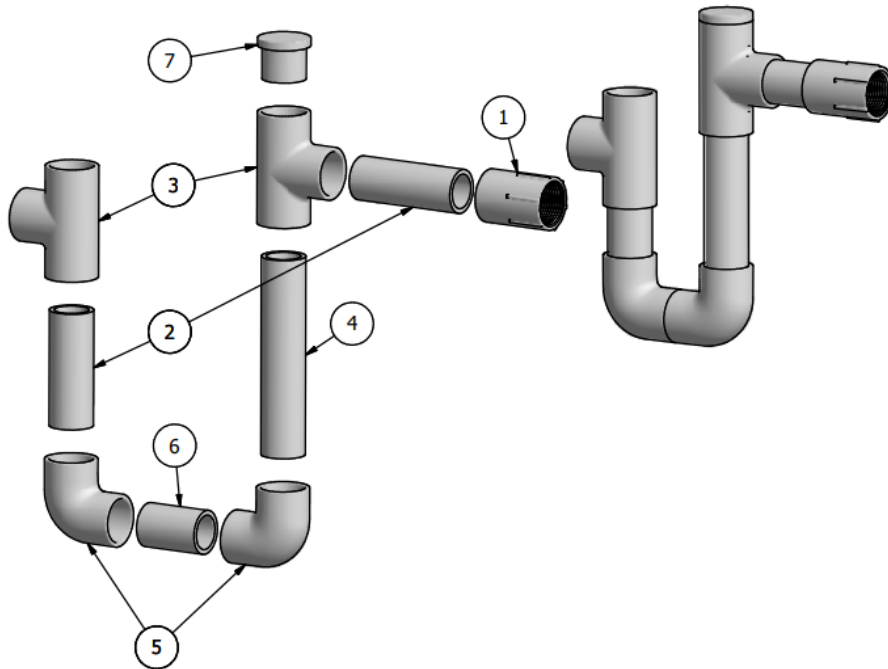

PARTS LIST		
ITEM	QTY	DESCRIPTION
1	1	1" PVC FEMALE ADAPTER
2	2	1" PVC PIPE (LENGTH = 3.5")
3	2	1" PVC TEE
4	1	1" PVC PIPE (LENGTH = 6")
5	2	1" PVC ELBOW 90°
6	1	1" PVC PIPE (LENGTH = 2")
7	1	1" PVC PLUG